PROPICK

SETUP & PACK-DOWN GUIDE

CUBE SAUNA TENT

Quick-deploy shelter | English edition

IN THE BAG Tent x1 | Stakes x4 | Guy lines x4
Accessory pouch x1 | Carry bag x1




Before you begin

Choose firm, level ground with clear space on every side. Keep the folded tent under control as the spring-loaded wall hubs open quickly.

2 Two people recommended


Large panels are easier and safer to control with a helper.

1. Open the tent

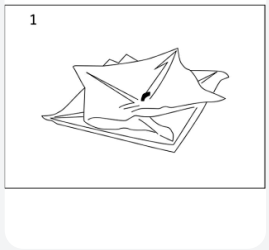


1 Lay it flat

Remove the tent from the carry bag, release the strap and spread it flat.

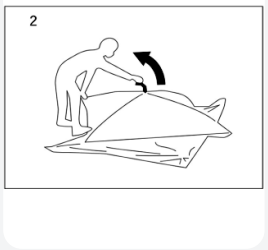


2 Lift the roof

Pull the top handle upward until the roof hub locks out.

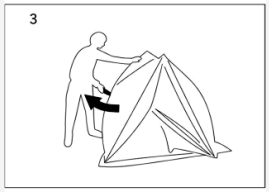

3 Pop one wall

Pull one side hub straight outward until it clicks into position.

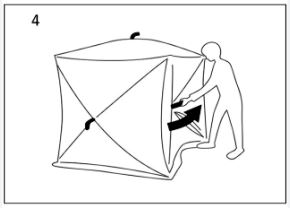

4 Open all walls

Repeat on the remaining three sides until the shelter stands square.

2. Square, anchor and tension

- Check that the roof and all four wall hubs are fully extended.
- Position the floor flat with the doorway operating freely.
- Stake all four lower anchor points. Attach and tension all four guy lines.
- Use extra anchoring appropriate to snow, ice, sand or soft ground.

! Wind warning


Never rely on the pop-out frame alone. Do not use the tent in strong, gusting or rapidly changing wind. If the shelter shifts, deforms or cannot remain securely anchored, pack it down immediately.

MODEL	OPEN SIZE (L x W x H)	PACKED SIZE	PACKED WEIGHT
Compact	1.8 x 1.8 x 2.0 m	138 x 27 x 27 cm	14.5 kg
Large	2.1 x 2.1 x 2.1 m	156 x 30 x 30 cm	17.5 kg

02 Pack down and store


Before collapsing

- Extinguish and remove every heat source. Allow the stove, chimney plate and tent to cool completely.
- Remove all occupants and loose items. Detach guy lines and pull the stakes.
- Open the door and vents, then make sure the fabric is dry before long-term storage.

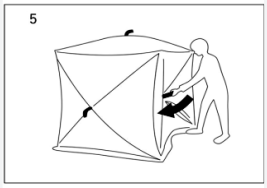


1 Release the walls

Push each side hub horizontally inward until all four walls collapse.

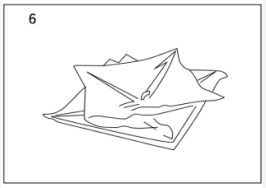


2 Lower the roof

Press the top hub down while keeping the tent floor facing the ground.

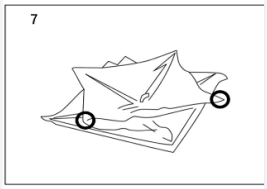

3 Fold the corners

Bring the upper corners inward one at a time without forcing the poles.

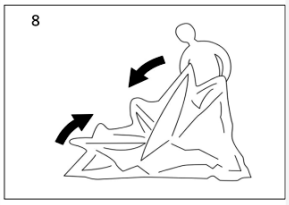

4 Secure and bag

Fold the lower corners inward, fasten the retaining strap and place in the carry bag.

Heat-source safety

This shelter is not fireproof. Incorrect stove or chimney use can cause fire, burns, carbon-monoxide poisoning or death.

- Use only a suitable outdoor solid-fuel stove and chimney system installed through the designated stove-jack opening.
- Keep hot metal and sparks away from fabric. Follow the stove manufacturer's clearance and heat-shield requirements.
- Maintain continuous ventilation and use a working carbon-monoxide alarm. Never sleep with an unattended fire.
- Never use gas burners, charcoal or open flames inside the tent. Keep children and pets away from the stove and chimney.

Recommended: Propick Portable Sauna Stove

AVAILABLE SEPARATELY

For a compatible Propick tent-sauna setup, we recommend using our dedicated portable sauna stove. Install and operate it only as directed in the separate stove manual, with the correct chimney components, heat shielding, ventilation and clearances.

Details and support: propick.co.nz | propicknz@gmail.com



Guide: PP-CST-EN | Rev 1.2 | Oct 2026